


Angle	Factor	Angle	Factor
0°	2,00	100°	1,29
10°	1,99	110°	1,15
20°	1,97	120°	1,00
30°	1,93	130°	0,84
40°	1,87	135°	0,76
45°	1,84	140°	0,68
50°	1,81	150°	0,52
60°	1,73	160°	0,35
70°	1,64	170°	0,17
80°	1,53	180°	0,00
90°	1,41		

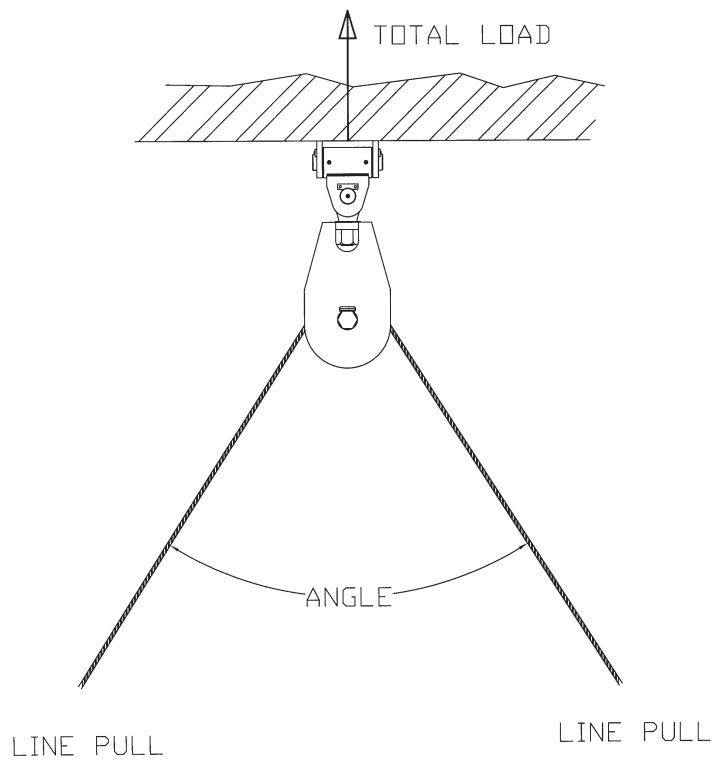

Specially for trawlblocks

Regarding testing of trawlblocks.

Extract from the Norwegian Maritime Directorate's Rules (§13.1.2.):

"For single sheave blocks with or without becket, the testload may be reduced in accordance with the above table when the resultant load in the headfitting exceeds 25 tonnes."

31.05.2006